


## SHORT MOUNTING CORD

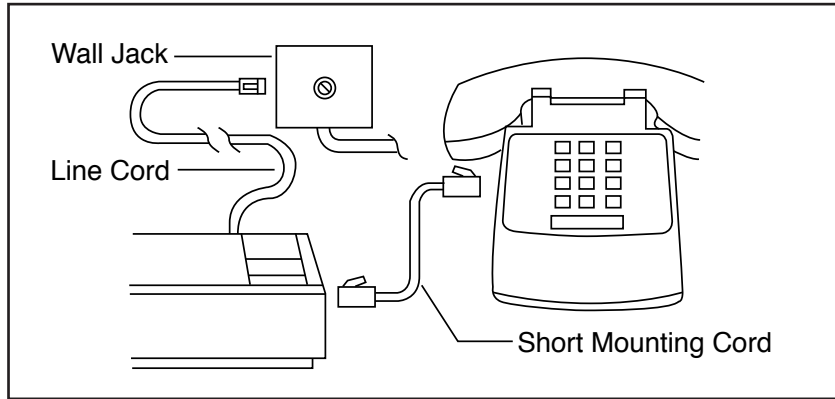

If you have a line cord connected to a modular jack, simply remove the old modular cord by squeezing the clip on the end and remove the cord.

Installation: Replace the old cord with your new cord by simply aligning the modular plug with the modular jack opening, squeeze the clip on the modular plug and push gently until it locks in place.


Connect the other end of the line cord to the telephone by aligning the modular plug with the telephone jack, squeezing the clip and pushing it gently into place until it locks.

### Limited Warranty

If this product is defective in material or workmanship, return it with proof of purchase in ninety (90) days of the date of purchase to the place of purchase for replacement of a similar item at no charge. Replacement is your exclusive remedy. There are no other express warranties.

Copyright©2008 by  
International Resources, Inc.  
All rights reserved.  
Made in China.

## SHORT MOUNTING CORD

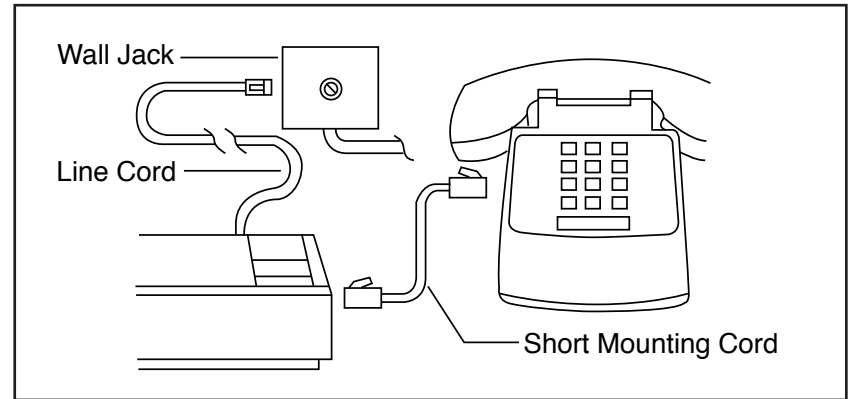

If you have a line cord connected to a modular jack, simply remove the old modular cord by squeezing the clip on the end and remove the cord.

Installation: Replace the old cord with your new cord by simply aligning the modular plug with the modular jack opening, squeeze the clip on the modular plug and push gently until it locks in place.

Connect the other end of the line cord to the telephone by aligning the modular plug with the telephone jack, squeezing the clip and pushing it gently into place until it locks.

### Limited Warranty

If this product is defective in material or workmanship, return it with proof of purchase in ninety (90) days of the date of purchase to the place of purchase for replacement of a similar item at no charge. Replacement is your exclusive remedy. There are no other express warranties.

Copyright©2008 by  
International Resources, Inc.  
All rights reserved.  
Made in China.