


# SINGLE OUTLET PHONE JACK

Easy install a new baseboard outlet jack in any convenient location.  
(For use with 1-3 telephone lines)

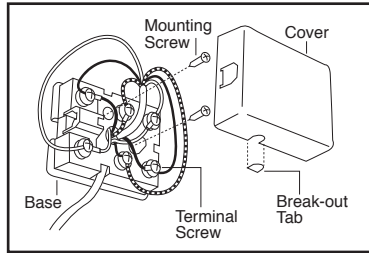

## Safety Precautions

Use caution when installing or modifying telephone wiring.

- Never install during thunderstorms.
- Never install in wet locations.
- Never touch uninsulated connectors unless disconnected.

Includes mounting screws.

TOOLS REQUIRED: screwdriver, wire stripper, wire cutters.

## Installation

1. Locate and take one telephone off hook. Disconnect the telephone wire at the network interface location for each line.
2. Using the screws provided, attach the modular jack base to the wall or baseboard.
3. Carefully remove some insulation from the incoming telephone line wire(s). (3 inches of outer jacket and 1/2 inch from each colored-wire lead)
4. Attach each of the stripped wire ends to the terminal screws. Be sure to match the colors accordingly. (See chart below)\*
5. After removing the appropriate break-out tabs from the jack cover, route the wire(s) through the opening(s).
6. Be sure no wires are pinched and place the cover over the base. Snap into place. If you need to remove the cover, use a screw driver to unsnap the cover from the base.
7. Reconnect the telephone line at the network interface location. Hang up the telephone which is off the hook.
8. Plug the modular cord from your telephone into the newly installed jack.  
Test the telephone

**\*Use this chart if existing wires are different from standard Red, Green (Line 1), Yellow, Black (Line 2), Blue, White (Line 3):**


Standard	A	B	C
<b>Red</b>	Blue w/white band	Blue w/white band	Blue
<b>Green</b>	White w/blue band	White w/blue band	White w/blue band
<b>Yellow</b>	Orange w/white band	Orange w/white band	Orange
<b>Black</b>	White w/orange band	White w/orange band	White w/orange band
<b>Blue</b>	Green w/white band		
<b>White</b>	White w/green band		

## Limited Warranty

If this product is defective in material or workmanship, return it with proof of purchase in ninety (90) days of the date of purchase to the place of purchase for replacement of a similar item at no charge. Replacement is your exclusive remedy. There are no other express warranties.

# SINGLE OUTLET PHONE JACK

Easy install a new baseboard outlet jack in any convenient location.  
(For use with 1-3 telephone lines)

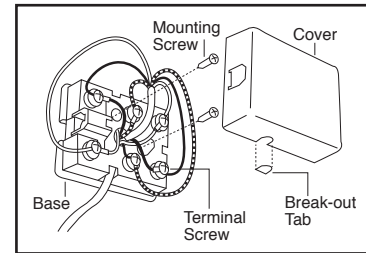

## Safety Precautions

Use caution when installing or modifying telephone wiring.

- Never install during thunderstorms.
- Never install in wet locations.
- Never touch uninsulated connectors unless disconnected.

Includes mounting screws.

TOOLS REQUIRED: screwdriver, wire stripper, wire cutters.

## Installation

1. Locate and take one telephone off hook. Disconnect the telephone wire at the network interface location for each line.
2. Using the screws provided, attach the modular jack base to the wall or baseboard.
3. Carefully remove some insulation from the incoming telephone line wire(s). (3 inches of outer jacket and 1/2 inch from each colored-wire lead)
4. Attach each of the stripped wire ends to the terminal screws. Be sure to match the colors accordingly. (See chart below)\*
5. After removing the appropriate break-out tabs from the jack cover, route the wire(s) through the opening(s).
6. Be sure no wires are pinched and place the cover over the base. Snap into place. If you need to remove the cover, use a screw driver to unsnap the cover from the base.
7. Reconnect the telephone line at the network interface location. Hang up the telephone which is off the hook.
8. Plug the modular cord from your telephone into the newly installed jack.  
Test the telephone

**\*Use this chart if existing wires are different from standard Red, Green (Line 1), Yellow, Black (Line 2), Blue, White (Line 3):**

Standard	A	B	C
<b>Red</b>	Blue w/white band	Blue w/white band	Blue
<b>Green</b>	White w/blue band	White w/blue band	White w/blue band
<b>Yellow</b>	Orange w/white band	Orange w/white band	Orange
<b>Black</b>	White w/orange band	White w/orange band	White w/orange band
<b>Blue</b>	Green w/white band		
<b>White</b>	White w/green band		

## Limited Warranty

If this product is defective in material or workmanship, return it with proof of purchase in ninety (90) days of the date of purchase to the place of purchase for replacement of a similar item at no charge. Replacement is your exclusive remedy. There are no other express warranties.